

NOTE: The information in this matrix lists whether or not additional cables need to be purchased with each controller-to-option configuration. For information on how to cable an option, refer to the *HP ProLiant DL580 Generation 2 Setup and Installation Guide*, the device-specific documentation, and the controller-specific documentation. For information on the specific options supported by the server, refer to the server and device QuickSpecs.

© 2002, 2003 Hewlett-Packard Development Company, L.P.

Hewlett-Packard Company shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.