

 
Installation Guide

HP J1528A Rack Integration Kit

Contents

cable management arm (CMA) (5065-5951)





cable tie (3) (1400-3011)

interlock device assembly mounting bracket and spring (2)

> (5065-5959) actuator bracket (2) (5002-1633)

long rod (5002-1634)

short rod (5002-1635)

installation guide (J1528-90002)



A M4x8mm screw (8) (0515-1142)



B M5x16mm screw (22) (0515-3019)



C M4 buttonhead screw with patchlock (18) (0515-4501)



D M5 barrel nut (22) (0590-2318)



E 10-24 custom nut (2) (A6093-00180)



Non-HP Rack Hardware

F M6 screw (18) (5021-1621)



G M6 cage nut (18) (5021-1620)



Tools Required

T15 Torx® driver T20 Torx® driver

T25 Torx® driver

10 mm hex nut driver (for non-hp racks) Phillips screwdriver (for non-hp racks)




This rack integration kit should not be mounted in racks with sectional columns.


Index

HP E-series Rack



Before installing this product in an HP rack, you must install the anti-tip stablilizer kit (A5540D), that is included with the Rack System/E, and ballast kit (J1479A or J1479B). If the HP rack is bolted to the floor through the rear anti-tip stabilizer, then the ballast kit is not needed. See step 2 in this guide.

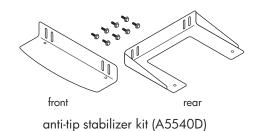

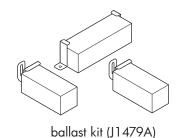




HP E-series and Non-HP Racks



The weight of this product requires a lift to install.

Do not lift manually to install.

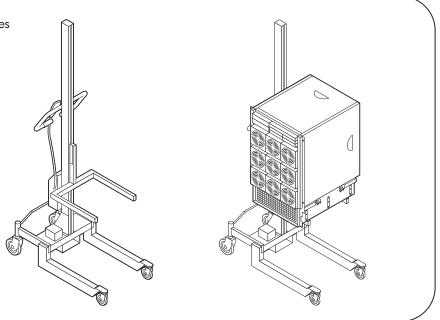


HP E-series Rack



If field service has built the integrated HP rack from the kit and shipped or moved it to your site, the cable ties (1) must be removed.

The cable ties (1) and tie-down brackets (2) must be attached whenever the integrated HP rack is moved.

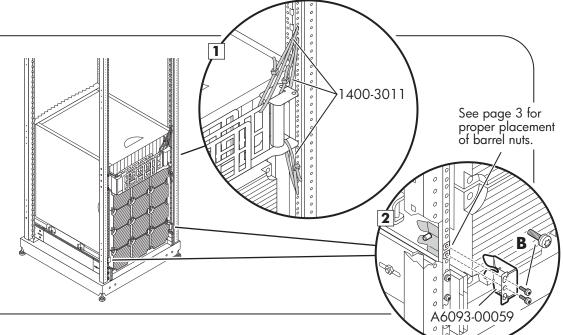


Attach barrel nuts to the front and rear columns as shown in the diagram below. 0 barrel nut (D) NOT TO SCALE 00 0 0**0** 0 PRODUCT OUTLINE PRODUCT OUTLINE 0 16U 16U 15U 15U 117.5 mm (4.63 inch) 1.3 14U 14U <u>ම</u> ි 13U 13U 12U 12U -444.5 mm (17.50 inch) 11U 1.4 11U 10U 10U 9U 9U -431.8 mm (17.00 inch) 17 U ^{8U} 8U 17 U 7U 6U 6U -5U 5U 165.1 mm (6.50 inch) 4U 4U 3U 3U 44.5 mm (1.75 inch) 0 2U 2U **↑** 73.0 mm 73.0 mm 0 1.2 (2.88 inch) (2.88 inch) 1U 1U


Barrel (D) nut locations for:


front

- 1.1 Mounting front of slides (see step 3)
- 1.2 Mounting rear of slides (see step 3)
- **1.3** Mounting CMA (see step 6)
- **1.4** Mounting product (see step 7)
- **1.5** Mounting tie-down brackets (see bottom of page 2).


rear

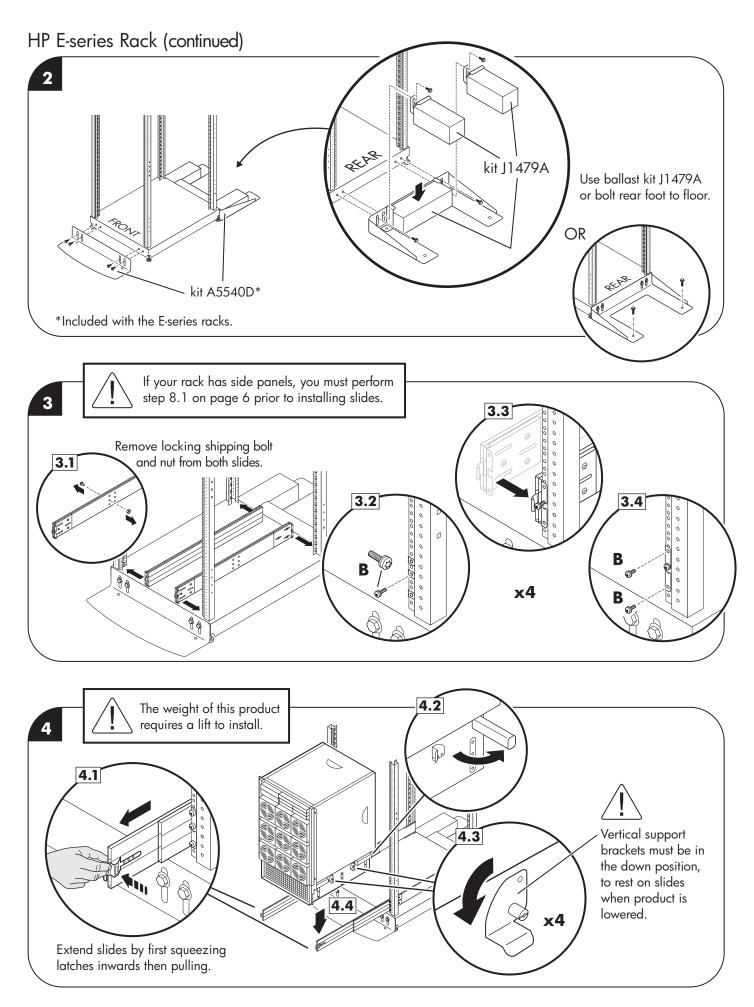


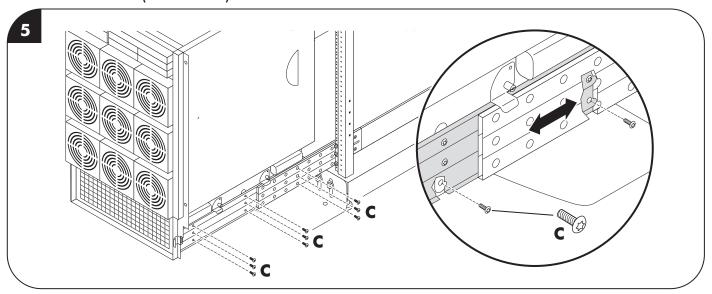

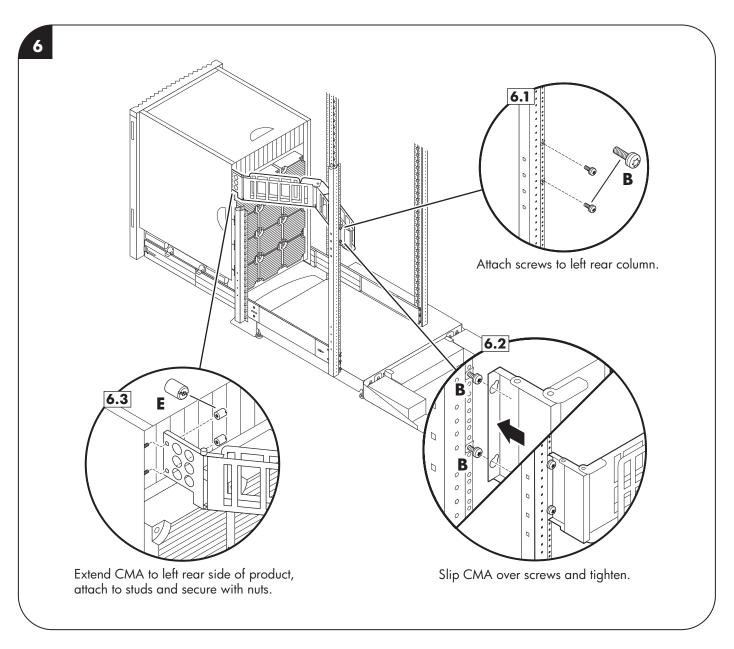

HP E-series Rack (continued)

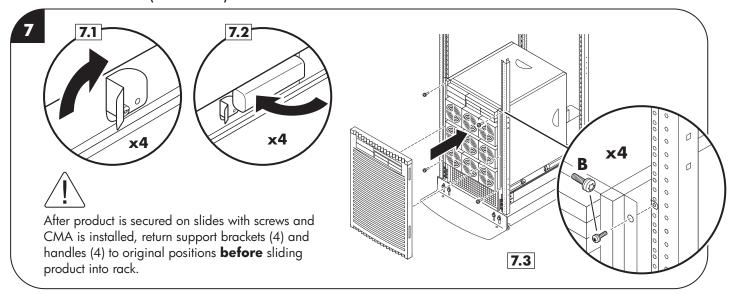


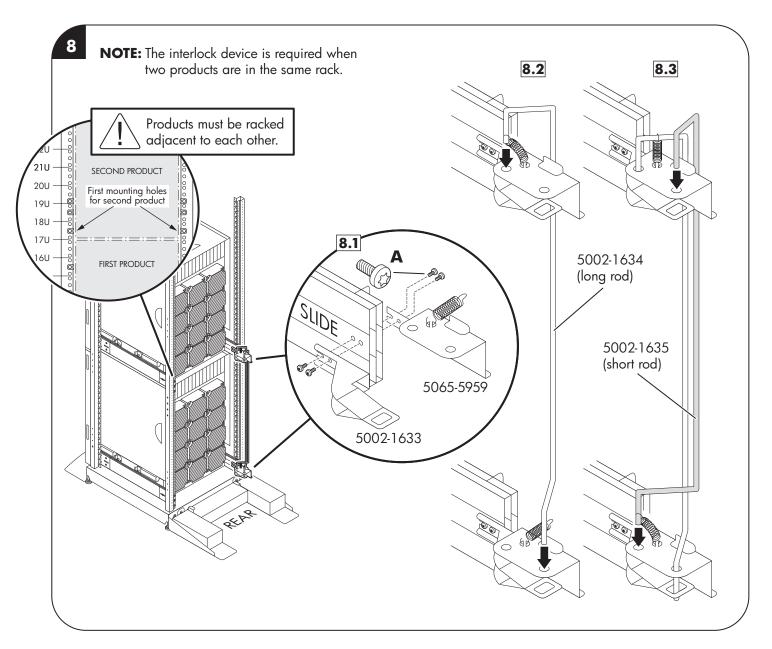




This rack integration kit should not be mounted in racks with sectional columns.

Attach cage nuts to the front and rear columns as shown in the diagram below.

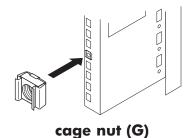


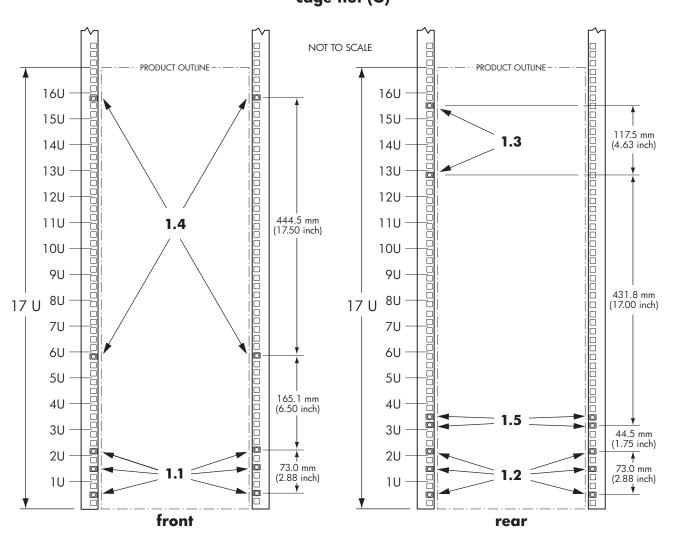



Cage nut (G) locations for:

- 1.1 Mounting front of slides (see step 3)
- **1.2** Mounting rear of slides (see step 3)
- 1.3 Mounting CMA (see step 6)
- **1.4** Mounting product (see step 7)
- **1.5** Mounting tie-down brackets for HP e- and u-series racks (see bottom of page 2).

 $[\]ensuremath{^{*}}$ Columns may vary from manufacturer to manufacturer.

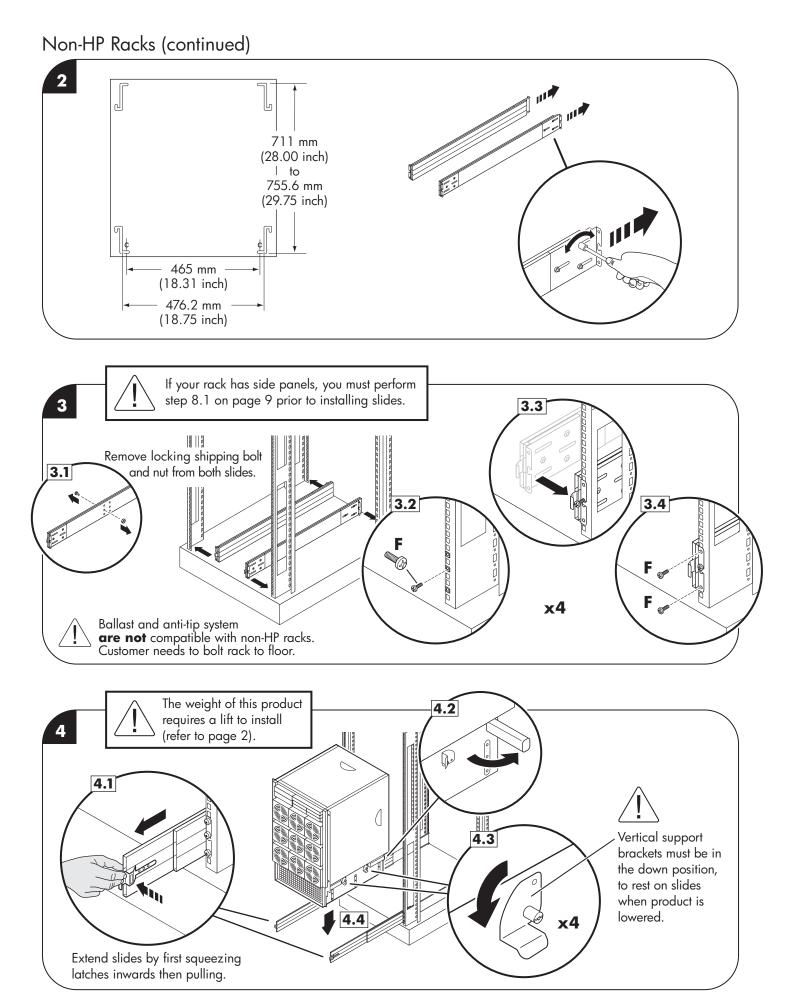

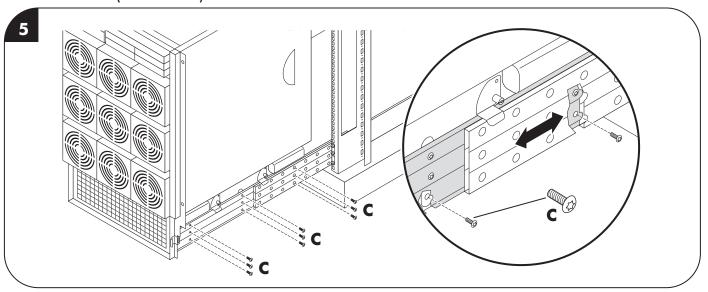

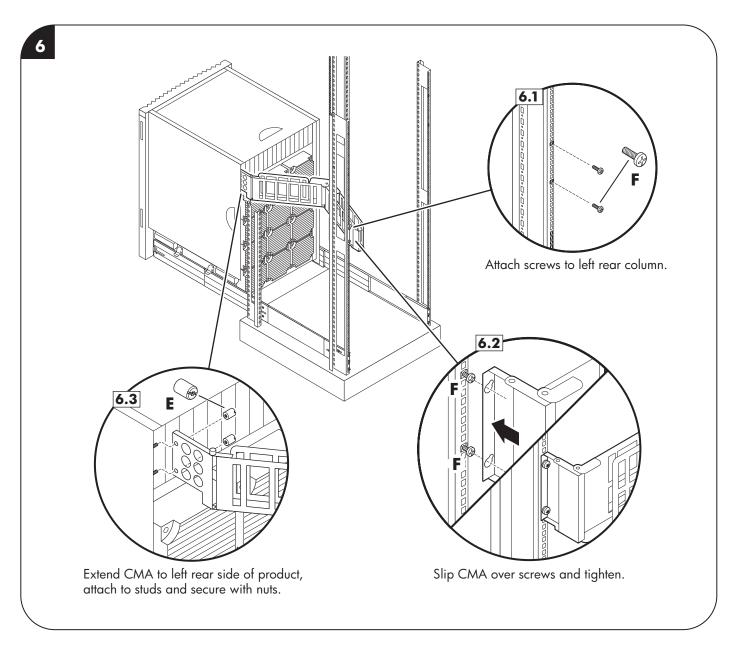

Non-HP Racks (continued)

