# COMPAQ

# RACK OPTION BAYING KIT

Installation Card



#### NOTICE

The information in this guide is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL. THIS INFORMATION IS PROVIDED "AS IS" AND COMPAQ COMPUTER CORPORATION DISCLAIMS ANY WARRANTIES, EXPRESS, IMPLIED OR STATUTORY AND EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTIBILITY, FITNESS FOR PARTICULAR PURPOSE, GOOD TITLE AND AGAINST INFRINGEMENT.

This publication contains information protected by copyright. No part of this publication may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

© 1999 Compaq Computer Corporation All rights reserved. Printed in the U.S.A. Compaq, ProLiant, SmartStart Registered U.S. Patent and Trademark Office.

Rack Option Baying Kit

First Edition (July 1999) Part Number 142557-021

**Compag Computer Corporation** 

# About This Device

The Rack Option Baying Kit allows you to connect multiple 9000 series 42U or 36U racks.

#### Kit Contents

- 24-inch Baying brackets (6)
- 600mm Baying brackets (6)
- T30 flathead screws (15)

#### **Rack Considerations**


Before beginning these procedures, make sure you understand and adhere to the following precautions.

WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:

- The leveling jacks are extended to the floor. The full weight of the rack rests on the leveling jacks. No components are extended. A rack may become unstable if
  - components are extended.


#### Step 1

Remove the front and rear doors.

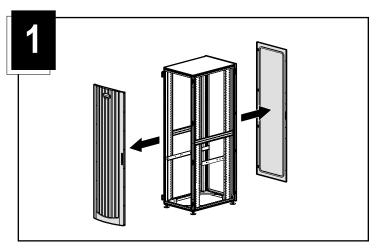

## Step 2


If side panels are present between the racks you plan to connect, remove the screws from the side rails, then remove the panels.

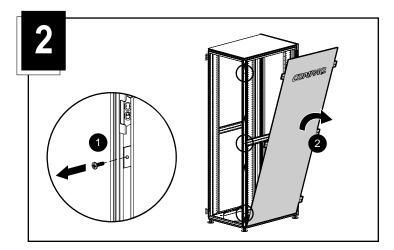

**WARNING:** To reduce the risk of personal injury or damage to the rack and equipment, the racks must be properly positioned and secured together according to these instructions. Failure to do so could result in an unstable installation.


#### Step 3

Position the racks side by side. Be sure that the feet of the racks are on solid flooring (no cracks or openings).

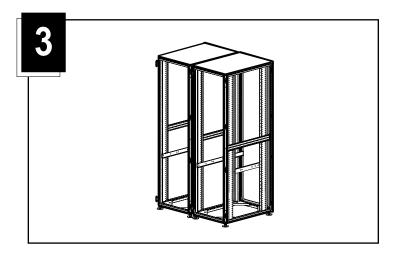


#### Step 4

Use either a 24-inch bracket or a 600mm bracket, depending on the floor layout. Attach three brackets to the front and three brackets to the rear of each rack set, using two T30 screws in each bracket.

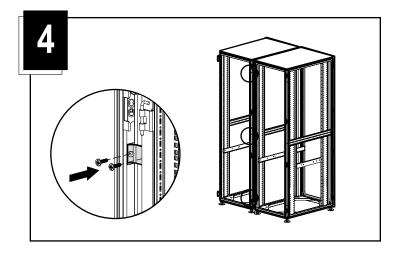


# Step 5

Couple any additional racks.

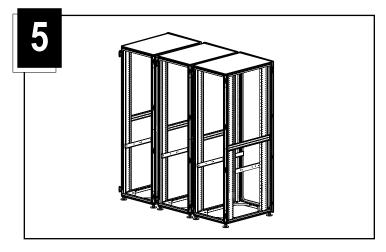

## Step 6

Attach a side panel to each end, and reattach the front and rear doors.

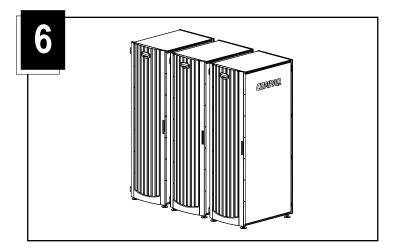

Installation is complete.