COMPAQ

Side Panel Option Kit

Installation Instructions



View Guide

NOTICE

The information in this publication is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN, NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL. THIS INFORMATION IS PROVIDED "AS IS" AND COMPAQ COMPUTER CORPORATION DISCLAIMS ANY WARRANTIES, EXPRESS, IMPLIED OR STATUTORY AND EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, GOOD TITLE AND AGAINST INFRINGEMENT.

This publication contains information protected by copyright. No part of this publication may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

© 1999 Compaq Computer Corporation All rights reserved. Printed in the U.S.A.

Compaq, Registered U.S. Patent and Trademark Office.

Side Panel Option Kit

Second Edition (December 1999) Part Number 142558-022

Compaq Computer Corporation



142558-022

About This Device

This installation card shows how to attach and remove side panels from the Compaq 9000 Series 42U or 36U rack products.

Kit Contents

- Side panel (2)
- Hangers (4)
- T-30 screws (12)
- T-30 driver

Rack Considerations

Before beginning these procedures, make sure you understand and follow these precautions:



WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:

The leveling jacks are extended to the floor.


The full weight of the rack rests on the leveling jacks.

The stabilizing feet are attached to the rack if it is a single rack installation.


The racks are coupled together in multiple rack installations.

Only one component is extended at a time. (A rack may become unstable if more than one component is extended for any reason).


Step 1 If necessary, remove front and rear doors.

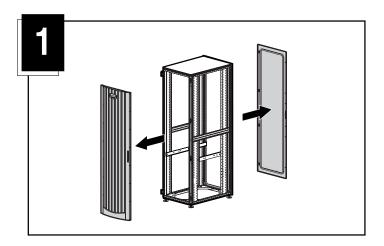


Step 2 Attach two hangers to each side of the rack, approximately 4 inches (10.16 cm) from the edge, then hook the top of each side panel to the hangers.

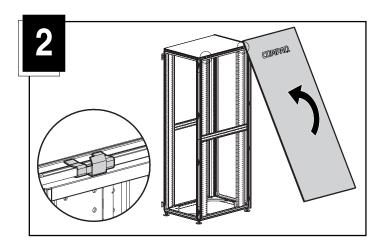

Step 3 Secure each panel with T-30 screws.

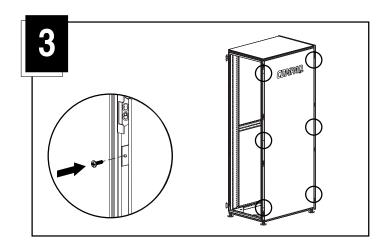

Step 4 Replace the front and rear doors.

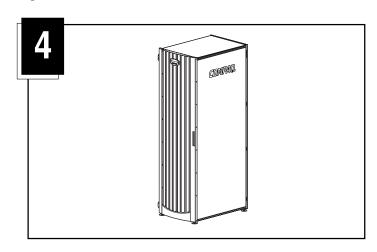

Installation is complete.