

---

# ***StorageWorks Enclosures: Configuring Modular Solutions***

**May 2000**

## Notice

The information in this publication is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN, NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This guide contains information protected by copyright. No part of this guide may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of this agreement.

Other product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

©2000 Compaq Computer Corporation. All rights reserved. Printed in the USA.

Aero, ALPHA, ALPHA AXP, AlphaServer, AlphaStation, Armada, BackPaq, COMPAQ, Compaq Insight Manager, CompaqCare logo, Counselor, DECterm, Deskpro, DIGITAL, DIGITAL logo, DIGITAL Alpha Systems, Digital Equipment Corporation, DIGITAL UNIX, DirectPlus, FASTART, Himalaya, InfoPaq, Integrity, LicensePaq, Ministation, NetFlex, NonStop, OpenVMS, PaqFax, Presario, ProLiant, ProLinea, ProSignia, QuickBack, QuickFind, Qvision, RDF, RemotePaq, RomPaq, ServerNet, SERVICenter, SmartQ, SmartStart, SmartStation, SolutionPaq, SpeedPaq, StorageWorks, Systempro/LT, Tandem, TechPaq, TruCluster, Tru64 UNIX, registered in United States Patent and Trademark Office.

Atalla, C-Series, Expand, FOX, Guardian, iTP, Measure, Netelligent, and PointView are trademarks of Compaq Computer Corporation.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

Intel, Pentium, and Intel Inside are registered trademarks and Xeon is a trademark of Intel Corporation.

UNIX is a trademark in the US and other countries, licensed exclusively through X-Open Company Ltd.

**StorageWorks Enclosures:**

**Configuring Modular Solutions**

**May, 2000**

**OVERVIEW ..... 4**

    INTENDED AUDIENCE..... 5

    SCOPE ..... 5

**STEP 1: CAPACITY REQUIREMENTS..... 6**

    STEP 1A: ..... 6

        Formula 1A: ..... 6

    STEP 1B: ..... 6

        Formula 1B: ..... 7

    STEP 1C: ..... 7

        Formula 1C: ..... 7

    STEP 1D: ..... 8

    STEP 1 SUMMARY ..... 8

**STEP 2: HSG80 CONTROLLERS..... 9**

    Formula 2:..... 10

**STEP 3: DISK DRIVE ENCLOSURES ..... 10**

    STEP 3A: SINGLE BUS MODE DEVICE ENCLOSURES ..... 11

        Formula 3A: ..... 12

    STEP 3B: DUAL BUS MODE DEVICE ENCLOSURES ..... 13

        Formula 3B: ..... 13

**STEP 4: SCSI CABLES..... 13**

    Formula 4:..... 13

**STEP 5: POWER CORDS ..... 14**

**STEP 6: CABINET REQUIREMENTS..... 14**

    Formula 6:..... 15

    STEP 6A: MODULAR STORAGE CABINETS FOR COMPONENT ASSEMBLY OR CONFIGURE-TO-ORDER..... 15

**STEP 7: ASSEMBLY ON SITE ..... 15**

## Overview

On April 25, 2000 Compaq announced the MA8000/EMA12000 family of external RAID Arrays. The MA/EMA modular storage systems can be ordered three ways.

- Predefined models provide a set number of controller shelves and drive shelves in a Modular Storage Cabinet under a single part number. **Note:** required options for predefined models are controllers, controller firmware, drives and the external cache batteries for the controller shelf. Predefined models are assembled in the factory with the chosen options as they appear on the order, and are shipped as a single unit.
  - MA8000: One controller shelf and 3 dual bus drive shelves in a 22U Modular Storage Cabinet (60Hz - 175992-B21, 50Hz - 175992-B22)
  - EMA12000 D14: Three controller shelves and 9 dual bus drive shelves in a 42U Modular Storage Cabinet (60Hz - 175990-B21, 50Hz - 175990-B22)
  - EMA12000 S14: One controller shelf and 6 single bus drive shelves in a 36U Modular Storage Cabinet (60Hz - 175991-B21, 50Hz - 175991-B22)
  - EMA12000 Blue: One controller shelf and 3 dual bus drive shelves in a 41U Modular Storage Cabinet (60Hz - 175993-B21, 50Hz - 175993-B22)
- Configure-to-Order allows you to specify the number of controller shelves and drive shelves desired in a Modular Storage Cabinet. The CTO part number serves as a flag to the factory to assemble all the parts on the order. CTO orders are assembled in the factory and shipped as a single unit.

Configure-to-Order part numbers:

North American	118102-888
Latin America	118102-888
EMEA	180610-999 for the MA8000 178267-999 for the EMA12000

- Individual component orders (not predefined or CTO) will require assembly on site. Assembly on site indicates the end user will receive the components separately and will be required to install them in any RETMA rack or cabinet.

The purpose of this guide is to assist in the creation of Configure-To-Order and individual component level solutions. Physical specifications for the pre-defined solutions are available in the MA8000/EMA12000 QuickSpecs, the Model 2200 QuickSpecs and the Model 4200 QuickSpecs.

## **Intended Audience**

This document is focused toward pre-sales configurations. Users of this document are assumed to be familiar with configuring RAID Arrays in an HSG80 controller.

## **Scope**

Although this document should help the reader configure and size the new Modular solutions, it does not include guidelines for the actual SAN itself. Please read the appropriate SAN and Operating System Applications notes for more SAN details

## Step 1: Capacity Requirements

Knowing the total disk drive count is the foundation of any storage configuration. Without this quantity, you are unable to determine the amount of controllers, device shelves and cabinets that need to be purchased.

Several steps should be followed before total disk drive count can be determined:

### Step 1A:

**Determine what is the total usable disk space required for this configuration.**

Usable space is defined as the actual disk space available to the operating system for data storage. The Modular solutions support the following disk drives:

<b>Disk Drive Options</b>	<b>Part Number</b>
18.2GB Ultra3 SCSI 10K RPM 1"	142673-B22
18.2GB Ultra2 SCSI 10K RPM 1"	128418-B22
18.2GB Ultra2 SCSI 7.2K RPM 1"	388144-B22
9.1GB Ultra3 SCSI 10K RPM 1"	142671-B22
9.1GB Ultra2 SCSI 10K RPM 1"	328939-B22
9.1GB Ultra2 SCSI 7.2K RPM 1"	123065-B22

### Formula 1A:

Divide the total usable space required by the disk drive size to determine the total number of usable disk drives.

#### **Example**

*250gb of usable storage / 18.2 GB disk drives = 13.74 drives or 14 drives*



---

#### **Note**

Always round up to the next whole drive.

---

### Step 1B:

**Determine the level of availability, cost, performance (i.e. RAID) required.**

If RAID 1, 0+1 or 3/5 storagesets are to be included in the configuration, then additional disks are required for RAID overhead. RAID 0 or JBOD (Just a Bunch of Disks) storagesets do not require additional disks. RAID overhead differs between RAID levels as shown below where N is usable space with overhead drives, if any, needed for each RAID level.

**Formula 1B:**

RAID Level	Drives
JBOD	N
RAID 0	N
RAID 1	$N * 2$
RAID 0+1	$N * 2$
RAID 3/5	$N + 1$

Using the above table, design storage sets using all usable drives from **Step 1A** to determine overhead, if any.

**Example**

*Using the 14 usable drives from **Step 1A** to create two 5-drive usable RAID 3/5 Storage sets and one 4-drive usable RAID 1 storage set, it will take 20 total drives.*

Storage set	Total Drives
1 <sup>st</sup> 5-drive RAID 3/5 storage set	$5+1 = 6$ drives
2 <sup>nd</sup> 5-drive RAID 3/5 storage set	$5+1 = 6$ drives
1 <sup>st</sup> 4-drive RAID 1 storage set	$4*2 = 8$ drives
20 Total Drives	

**Step 1C:****Determine if the configuration will use Hot Spare disks.**

If RAID 1, 0+1 or 3/5 storage sets are included in the configuration, then Hot Spare disk drives are highly recommended. Although hot spares are not necessary for RAID availability, they do offer additional protection against drive failures. If a RAID member fails then the Hot Spare can automatically take the place of the failed RAID drive. The controller will then use the remaining RAID set members to rebuild the failed member's data to the new drive.

**Warning**

Hot Spares cannot span between multiple HSG80 controller pairs. Each controller pair must have its own pool of hot spares.

**Formula 1C:**

With hot spares, there is no standard formula to compute the drives necessary. It is based on the risk/comfort level of the storage manager to allow RAID storage sets to withstand the possibility of multiple drive failures.

Other factors:

- The cost of additional overhead drives that may or may not be used.

- The use disk enclosure slots for holding the hot spares.
- The site's service contract. If a site is 24\*7 with 4 hour response it might not be as critical as opposed to a site that has a 8\*5 next-day response contract.

In any case, the question to ask the storage manager is: "How comfortable are you having a RAID set lose a drive at 11pm on a Friday night?"

Normally, two drives per controller pair is a reasonable number of hot spares to include in your configuration.

**Example**

*Two drives will be added for hot spares.*

**Step 1D:**

**Determine if there is any need for future storage expansion.**

If storage expansion is required, it is easier to account for the disk space now than later. Not taking into account storage expansion today could mean not only purchasing additional disk drives but might also include additional controllers, shelves and racks tomorrow.

You do not need to add expansion drives to the final purchase order but by accounting for them in the overall configuration, you guarantee disk enclosure slots available to be used later.

Use the formulas from Step 1A, 1B and 1C to include storage expansion in your overall configuration.

**Step 1 Summary**

Following the steps suggested by Step 1 you should come very close to providing an accurate count of all drives needed in the configuration.

**Example**

*Total disk drive capacity:*

***22 drives = 14 Usable + 6 RAID overhead +2 Hot Spares***



## Step 2: HSG80 Controllers

The HSG80 controller firmware (ACS 8.5) can address up to 12 drives per UltraSCSI bus. Using the 4200 in single bus mode means that only 12 of the 14 drives are used. When using the 4200 in dual bus mode, the firmware can see 7 drives on each bus allowing use of all 14 drives

The Model 2200 controller shelf supports a single controller or a dual controller configuration for high availability.

Model	Part #	Model Description
2200	135820-B21	4U, RETMA Rack Mount Kit, (2) power cords IEC C13-C14, (2) 180W power supplies, EMU, (3) fans

Select each mandatory option with quantities specified.

Part #	Quantity	Description
176622-B21	1 or 2 per M2200	HSG80 RAID Array Controller w/ 256MB Cache
135823-B21	1 per controller	Single external cache battery
128697-B21	1 per controller (1)	ACS V8.5F Controller FC-AL/FC-SW Software
380577-001	1 per controller (1)	ACS V8.5G Controller FC-AL
160091-B21	1 per controller (1)	ACS V8.5S Controller FC-SW Software with Snapshot
128698-B21	1 per controller (1)	ACS V8.5P Controller FC-SW Software with Data Replication Manager
380551-001	1 per O/S	Windows NT / Windows 2000 OS Platform Kit
380554-001	1 per O/S	Sun Solaris OS Platform Kit
380556-001	1 per O/S	SGI IRIX OS Platform Kit
380557-001	1 per O/S	HP-UX OS Platform Kit
380553-001	1 per O/S	Tru64 UNIX OS Platform Kit
380555-001	1 per O/S	OpenVMS OS Platform Kit
380559-001	1 per O/S	NetWare OS Platform Kit

### Note (1)

\* One variant of ACS is required: either ACS 8.5F or ACS 8.5S or ACS 8.5P. In a dual controller configuration the same version and variant of ACS is required in each controller.

Select each option with quantities specified as needed.

Part #	Quantity	Description
380674-B21	1 per controller	256MB additional cache for HSG80
176623-B21	1 per Cache Module (2)	HSG80 Cache bulkhead upgrade

### Note (2)

\* The cache bulkhead upgrade is only required for existing HSG80 controllers that are migrating from a BA370 enclosure into the Model 2200. New HSG80 controllers ordered under 176622-B21 ship with the appropriate cache bulkhead.

**Formula 2:**

Divide the total disk drive capacity from Step 1 by 72 (Single Bus) or 42 (Dual Bus) to determine the controller (single or cooperating pair) count.

**Example**

*Step 1 example total capacity:  $22 / 72 = .31$  or 1 (single or cooperating pair) controller  
 or  $22 / 42 = .52$  or 1 (single or cooperating pair) controller*



**Note**

Always round up to the next (single or cooperating pair) controller

**Step 3: Disk Drive Enclosures**

The HSG80 controller firmware can address up to 12 drives per UltraSCSI bus. Using the 4200 in single bus mode, this means that 12 of the 14 drives in single bus models are used. Using the 4200 in dual bus mode, the firmware can see seven drives on each bus allowing use of all 14 drives. The maximum number of drives behind an HSG80 (single or cooperating pair) is 72.

**Single Bus Mode vs. Dual Bus Mode**

The table below describes the advantages and disadvantages between each mode.

	<b>Advantages</b>	<b>Disadvantages</b>
<b>Single Bus Mode</b>	<ul style="list-style-type: none"> <li>Greater disk capacity per controller channel</li> <li>Shelf failure only effects one channel</li> </ul>	<ul style="list-style-type: none"> <li>More drives per channel can degrade performance</li> <li>Doubles rack space consumed vs. dual bus shelves</li> </ul>
<b>Dual Bus Mode</b>	<ul style="list-style-type: none"> <li>Less drives per channel may increase performance</li> <li>Half the rack space consumed vs. single bus shelves allows greater disk and controller capacity per cabinet</li> </ul>	<ul style="list-style-type: none"> <li>Less disk capacity per controller channel</li> <li>Shelf failure effects two channels possibly causing RAIDset failure</li> </ul>

The maximum number of drives behind an HSG80 (single or cooperating pair) using six Single Bus Shelves is 72.

The maximum number of drives behind an HSG80 (single or cooperating pair) using three Dual Bus Shelves is 42.



**Note**

Regardless of Bus Mode, it is recommended to make use of all 6 UltraSCSI channels from the controller shelf. Storageset performance and availability may be compromised if failure to do so. The formulas in this configuration guide adhere to this recommendation.

- If you are using Single Bus Mode, go to Step 3A
- If you are using Dual Bus Mode, go to Step 3B

### Step 3A: Single Bus Mode Device Enclosures

The Model 4214R has slots for 14 drives and supports 12 drives in single bus mode behind an HSG80 controller running ACS 8.5. The 4214 requires a separate order for the redundant power supply. 42xx drive shelves do not support daisy chaining between shelves.

Part #	Quantity	Description
103381-001	Up to 6 per Model 2200 Enclosure	Disk Enclosure Model 4214R
103381-B31 (Int'l)		3U, 14 bay device shelf, RETMA mounting kit, Single Bus, single power supply; single IEC-320-C13 PLUG X NEMA L5-15
103381-291 (Japan)		
119826-B21	1 per Model 4214R	4214R Redundant power supply, single IEC-320-C13 PLUG X NEMA

Select the option to convert single bus to dual bus.

Part #	Quantity	Description
119829-B21	1 per Model 4214R	4214R Dual Bus I/O Module - Changes the 4214R from single bus to dual bus mode.

#### Note

4214Rs manufactured before 28 February 2000 may require the exchange of the EMU and the single bus modules to operate properly with the HSG80. Check the EMU and I/O modules: if you see an "FB" sticker, the modules are appropriate for the HSG80. If there is no sticker, you must quiesce the shelf and remove both the EMU and the I/O modules from the back of the enclosure [shown in Figure 1 below] to inspect their part numbers.

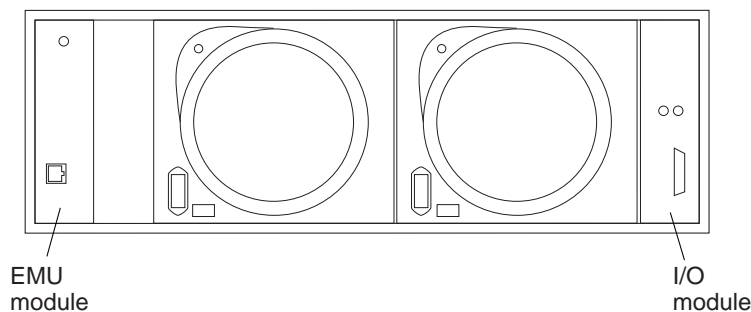


Figure 1

If the part number on the EMU module is 166388-001 (70-40064-03) [shown in figure 2 below] it is appropriate for the HSG80.

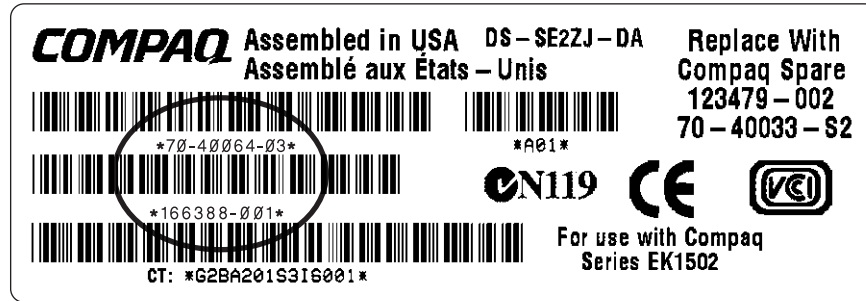


Figure 2

If the part number on the I/O module is 166387-001 (70-40033-02) [shown in Figure 3 below] it is appropriate for the HSG80.



Figure 3

If your part numbers DO NOT match, contact your local service representative for the parts exchange under your service warranty.

**Formula 3A:**

Total (single or cooperating pair) controllers from Step 2 \* 6 = Number of shelves

**Example**

*Step 2 controller total 1 \* 6 = 6 Single Bus Mode Device Enclosures*

## Step 3B: Dual Bus Mode Device Enclosures

The Model 4254 has slots for 14 drives, supporting seven drives per bus. 42xx drive shelves do not support daisy chaining between shelves.

Part #	Quantity	Description
138151-001	3 per M2200 Enclosure	Disk Enclosure Model 4254
138151-B31 (Int'l)		3U, 14 bay device shelf, RETMA mounting kit, Dual Bus, dual power supply, (2) IEC-C13 IEC-C14, (2) IEC-320-C13 PLUG X NEMA L5-15
138151-291 (Japan)		

### Formula 3B:

Total (single or cooperating pair) controllers from Step 2 \* 3 = Number of shelves

#### Example

*Step 2 controller total 1 \* 3 = 3 Dual Bus Mode Device Enclosures*

## Step 4: SCSI Cables

When assembling from the component level in any rack other than the Modular Storage Cabinet, SCSI Cables must be ordered separately for connections from the Model 2200 RAID controller enclosure to the device enclosures. Both the Model 2200 RAID controller enclosure and the device enclosures have VHDCI connectors.

Part #	Description
168256-B21	1M VHDCI to VHDCI SCSI Cable
168257-B21	2M VHDCI to VHDCI SCSI Cable
189505-B21	3M VHDCI to VHDCI SCSI Cable
400983-005	5M VHDCI to VHDCI SCSI Cable
400985-010	10M VHDCI to VHDCI SCSI Cable

#### Note

Always try to order the shortest cables possible to avoid excessive cable storage within the rack.

### Formula 4:

The total number of cables ordered must equal the total number of device enclosure I/O Module ports.

#### Example

Using Step 3A, 6 Single Bus device enclosures = 6 SCSI Cables

Using Step 3B, 3 Dual Bus device enclosures = 6 SCSI Cables

## Step 5: Power Cords

Modular Storage Cabinets include redundant Power Distribution Units (PDU) and cables. If ordering CTO please go to Step 6.

For individual component orders, the Model 2200 ships with two North America power cords (IEC320-C13 to IEC320-C14) that connect directly into a Power Distribution Unit (PDU). The Model 4214 ships with one power cord (IEC320-C13 to NEMA 5-15) per power supply that connects to a wall outlet or power strip. Therefore, additional power cords are necessary when ordering a Model4214 and the redundant power supplies.

The Model 4200 and Model 4254 ship with (2) IEC320-C13 to NEMA 5-15) and (2) IEC-C13 to IEC-C14 cables that plug into a Power Distribution Unit (PDU).

Depending on the configuration packaging, additional power cords may be required for specific country usage.

### Power Cord: IEC320-C13 to IEC320-C14 (Storage controller/device enclosure to PDU)

Part #	Description
BN35S-02	2.5M IEC cable, black
BN30B-02	2.5M IEC cable, gray

## Step 6: Cabinet Requirements

The modular solution has been qualified in RETMA cabinets. The predefined and Configure-To-Order solutions are assembled in the Modular Storage Cabinets. Ordering a CTO unit build using the –999 or –888 suffix assumes use of the Modular Storage Cabinets. These cabinets include redundant Power Distribution Units and power cables.

The Model 2200 controller enclosure as a height of 4U and the 42xx Device Enclosures have a height of 3U. The redundant PDU has a height of 2U.

The formula below provides a starting point for determining the number of cabinets required.

**Formula 6:**

$$(PDU * 2) + (DS * 3) + (CS * 4) / CU = \text{Number of cabinets to order}$$

DS = Device Enclosure total from **Step 3A** and/or **Step 3B**

3 = Number of U's per Device Enclosure

CS = Controller Enclosure total from **Step 2**

4 = Number of U's per Controller Enclosure

CU = Single Cabinet U's available

PDU = Redundant PDU

- Modular Storage Cabinets: 22U, 36U, 41U, 42U

**Note**

If there is a remainder left after the division then you must either roundup to the next whole number or you must recalculate using a larger cabinet.

## Step 6A: Modular Storage Cabinets for component assembly or Configure-to-Order

Part #	Description
180311-B21	42U Modular Storage Cabinet (opal) 60Hz
180312-B22	42U Modular Storage Cabinet (opal) 50Hz
180313-B21	36U Modular Storage Cabinet (opal) 60Hz
180314-B22	36U Modular Storage Cabinet (opal) 50Hz
180315-B21	22U Modular Storage Cabinet (opal) 60Hz
180316-B22	22U Modular Storage Cabinet (opal) 50Hz
180317-B21	41U Modular Storage Cabinet (blue) 60Hz
180318-B22	41U Modular Storage Cabinet (blue) 50Hz

## Step 7: Assembly on Site

Individual components purchased to be installed in racks other than the Modular Storage Cabinet require assembly on site. (Predefined and Configure-To-Order solutions ship assembled in the Modular Storage Cabinets.) All components ship with their installation guides. Please read the installation guides carefully before installation to ensure that all safety considerations are met.

### Model 2200 documentation includes:

- Model 2200-Series UltraSCSI Controller Enclosure User Guide
- Controller Enclosure, RETMA Rack-Mounting Kit
- Replacing an External Cache Battery (ECB)

- ECB Battery Service Label Placement

**Model 42xx documentation includes:**

- Compaq StorageWorks Model 4200 Family LVD Disk Enclosures User Guide

**HSG80 documentation:**

- HSG80 Array Controller StorageWorks Solution Software Kit Overview
- HSG80 Array controller ACS 8.5 Configuration Guide
- HSG80 Array Controller ACS 8.5 CLI Reference Manual
- HSG80 Array Controller ACS 8.5 Maintenance and Service Guide

**Platform kit documentation:**

- Command Console User Guide
- Platform specific Installation Reference Guide
- Release Notes